



Communication and Sensory Learning Aids (CSL)

A range of solutions to support visual, auditory, kinaesthetic and tactile communication for both the coach and the participant.

Rattle Snake Sensory Kit

A sensory aid using a variety of
colours, shapes and textures.

Version: 2.0
SKU: RAT-2-6M

Communication and
Sensory Learning Aids

Pack weight: 0.6kg



Suitable for:

Adding high levels of sensory
stimulation within moments during
climbing and other sporting
activities.

Contents

- 1 6m Snake Webbing
- 10 Assorted Rattle
Bags
- 1 Tuff Stuff Sac
(M Square)

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The aim of the Rattle Snake Sensory Kit is to create a stimulating and interesting environment that promotes activity. The Rattle Snake is a string of bags of various colours, shapes and textures. With considered positioning on climbing walls, high ropes or other areas where activity is taking place, the Rattle Snake provides a versatile tool to support communication and provides highly visual targets. The Rattle Snake accommodates inclusion by enabling each participant to individually goal-set and, at the same time, remain part of a group activity/session.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE

May require
washing
between use

Cho

CHOKING

Contains
small
parts

All

ALLERGY

Materials may
cause allergic
reactions

Fit

FIT

Only for
intended
purpose

Con

CONSENT

Gain consent
before use

Ent

ENTRAPMENT

Use may
cause
entrapment

Sys

SYSTEM

Ensure integrity
if used as part
of a system

Fla

FLAMMABLE

Contains
flammable
parts

Wear

WEAR & TEAR

Wear and Tear
reduces
function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.


All Rights Reserved.

Wrap-on-Coaching

Coloured wrist and leg bands to assist while coaching.

Version: 1.0
SKU: WRA-1

Communication and
Sensory Learning Aids
Pack weight: 0.3kg

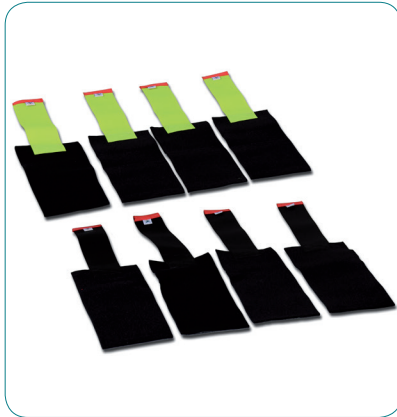

Contents

- 4 Neon Velcro Wraps
- 4 Black Velcro Wraps
- 1 Tuff Stuff Sac (S Square)

Suitable for:

Any coaching session where a visual reference is needed to support communication.

A Centre Equipment Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

Wrap-on-Coaching consists of highly visible and contrasting arm or leg straps. The straps help provide a quick and easy point of reference that supplements or even replaces verbal communication. These are especially useful when communicating at a distance or where the environment may cause confusion or be a distraction. The straps can be worn by the coach, participant or both. When worn considerably they can help identify left, right, up, down, forwards or backwards by providing an effective visual link.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Skin

SKIN CARE
Consider skin care during use

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Ent

ENTRAPMENT
Use may cause entrapment

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Adder Ladder Sensory Kit

Sensory communication aids
for use with the Adder Ladder.

Version: 1.0
SKU: SEN-1

Communication and
Sensory Learning Aids
Pack weight: 1.25kg



Contents

- 9 Green Pertex Wraps
- 9 Yellow Pertex Wraps
- 9 Black PU Wraps
- 9 Red Cordura Wraps
- 18 Pink Topspan Wraps
- 18 Blue Topspan Wraps
- 2 Triangle Topspan Rope Wraps (Various Colours)
- 1 Tuff Stuff Sac (M Square)

Suitable for:

Maintaining focus and stimulation for those who find perception or concentration a challenge.

A Centre Equipment product
For additional information visit:
www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Sensory Kit is composed of assorted wraps of contrasting colours and textures to aid climbers who may benefit from assistance with attention and focus. The Sensory Kit allows climbing or roped activity environments to be tailored to the sensory requirements of a climber.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

Cho

CHOKING
Contains small parts

All

ALLERGY
Materials may cause allergic reactions

Skin

SKIN CARE
Consider skin care during use

Fit

FIT
Only for intended purpose

Con

CONSENT
Gain consent before use

Sys

SYSTEM
Ensure integrity if used as part of a system

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.



PAP

**Function: Pads
and Protection**

Pads and Protection (PAP)

A range of solutions to pad and protect delicate or sensitive areas such as stump ends or parts of the body with limited or no feeling, control and/or strength.

Tortoiseshell Joint Wraps and Padding System (L)

Padded knee or elbow protectors.
Available in three sizes: S, M, L

Version: 3.0
SKU: TOR-3-L

Pads and Protection

Pack weight: 0.65kg



Contents

- 1 Pair of Joint Wraps
- 1 Pair of Foam Pads
- 1 Tuff Stuff Sac (M Square)

Suitable for:

Padding to support movement during activities, including climbing, caving and ropes courses.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

Tortoiseshell Joint Wraps are adjustable padding with tough covers that protect sensitive areas around elbows, knees and stumps. They are typically used during climbing and other outdoor activities. They are especially useful for individuals with limited control or feeling, or where delicate or sensitive areas need to be protected. When used considerately the Tortoiseshell Joint Wraps can provide reassurance to an individual that participation is not going to be harmful or damaging.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg HYGIENE May require washing between use	All ALLERGY Materials may cause allergic reactions	Med MEDICAL May interfere with bags and tubes	Cir CIRCULATION May affect circulation	Skin SKIN CARE Consider skin care during use	Mov MOVEMENT Prolonged use may cause discomfort	Fit FIT Only for intended purpose
Con CONSENT Gain consent before use	Per PERSONAL Requires operating in personal areas	Sys SYSTEM Ensure integrity if used as part of a system	Fla FLAMMABLE Contains flammable parts	Wear WEAR & TEAR Wear and Tear reduces function		

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Tortoiseshell Joint Wraps and Padding System (M)

Padded knee or elbow protectors.
Available in three sizes: S, M, L

Version: 3.0
SKU: TOR-3-M

Pads and Protection

Pack weight: 0.5kg



Contents

- 1 Pair of Joint Wraps
- 1 Pair of Foam Pads
- 1 Tuff Stuff Sac (M Square)

Suitable for:

Padding to support movement during activities, including climbing, caving and ropes courses.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

Tortoiseshell Joint Wraps are adjustable padding with tough covers that protect sensitive areas around elbows, knees and stumps. They are typically used during climbing and other outdoor activities. They are especially useful for individuals with limited control or feeling, or where delicate or sensitive areas need to be protected. When used considerately the Tortoiseshell Joint Wraps can provide reassurance to an individual that participation is not going to be harmful or damaging.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg HYGIENE May require washing between use	All ALLERGY Materials may cause allergic reactions	Med MEDICAL May interfere with bags and tubes	Cir CIRCULATION May affect circulation	Skin SKIN CARE Consider skin care during use	Mov MOVEMENT Prolonged use may cause discomfort	Fit FIT Only for intended purpose
Con CONSENT Gain consent before use	Per PERSONAL Requires operating in personal areas	Sys SYSTEM Ensure integrity if used as part of a system	Fla FLAMMABLE Contains flammable parts	Wear WEAR & TEAR Wear and Tear reduces function		

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Tortoiseshell Joint Wraps and Padding System (S)

Padded knee or elbow protectors.
Available in three sizes: S, M, L

Version: 3.0
SKU: TOR-3-S

Pads and Protection

Pack weight: 0.4kg

S

Small



Contents

- 1 Pair of Joint Wraps
- 1 Pair of Foam Pads
- 1 Tuff Stuff Sac (M Square)

Suitable for:

Padding to support movement during activities, including climbing, caving and ropes courses.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

Tortoiseshell Joint Wraps are adjustable padding with tough covers that protect sensitive areas around elbows, knees and stumps. They are typically used during climbing and other outdoor activities. They are especially useful for individuals with limited control or feeling, or where delicate or sensitive areas need to be protected. When used considerately the Tortoiseshell Joint Wraps can provide reassurance to an individual that participation is not going to be harmful or damaging.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE

May require washing between use

All

ALLERGY

Materials may cause allergic reactions

Med

MEDICAL

May interfere with bags and tubes

Cir

CIRCULATION

May affect circulation

Skin

SKIN CARE

Consider skin care during use

Mov

MOVEMENT

Prolonged use may cause discomfort

Fit

FIT

Only for intended purpose

Con

CONSENT

Gain consent before use

Per

PERSONAL

Requires operating in personal areas

Sys

SYSTEM

Ensure integrity if used as part of a system

Fla

FLAMMABLE

Contains flammable parts

Wear

WEAR & TEAR

Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.


Climbing Pads

Assorted harness pads to bridge or protect sensitive areas.

Version: 3.0
SKU: CLI-3

Pads and Protection

Pack weight: 0.25kg

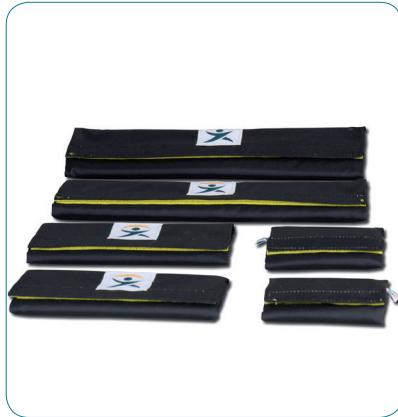

Contents

- 2 Small Pads
- 2 Medium Pads
- 2 Large Pads
- 1 Tuff Stuff Sac (M Long)

Suitable for:

Additional padding over or around key sensitive areas when using a full body harness.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

Climbing Pads are a sized modular system used to span or protect sensitive areas of the body while the user is in a climbing harness. The three sizes provided come with coloured tabs to aid intuitive use.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Med

MEDICAL
May interfere with bags and tubes

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Sys

SYSTEM
Ensure integrity if used as part of a system

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org



TPS

**Function: Trunk
Postural Support**

Trunk Postural Support (TPS)

A range of solutions to support posture, sitting balance and comfort during performance.

Kite II (S)

An adjustable full body harness that provides full body and trunk support in a padded seated position. Available in four sizes: S, M, L, XL

Version: 2.0
SKU: KIT-2-S

Trunk and Postural Support

Pack weight: 3.35kg

S

Small



Contents

- 1 Kite II Harness:
 - 1 Kite II Body
 - 1 Kite II Chest Band
- 1 Standard Base Insert:
 - 1 Red Cover
 - 1 Under-Thigh Roll
 - 1 Seat Pad
 - 1 Comfort Pad
 - 1 Base Stiffener
- 1 Standard Back Insert:
 - 1 Black Cover
 - 1 Lumbar Pad
 - 1 Back Pad
 - 1 Back Stiffener
- 1 Attachment Kit:
 - 1 10mm Delta Maillon
 - 4 8mm Delta Maillons
 - 2 Red Lanyards (Back and Leg)
 - 2 Blue Lanyards (Back and Leg)
 - 1 Tuff Stuff Sac (L Square)

Suitable for:

Climbing, abseiling, high and low rope courses, caving or any situation where a full body harness might be used.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Kite II is a full body harness that is useful where the user's body shape is symmetrical or asymmetrical whilst seated. The Kite II can be adjusted to accommodate climbers who may be either top heavy or bottom heavy. Fitted from either standing, sitting, or lying down, the Kite II provides postural and positioning support that can be tailored to the individual. It enables seated climbing in comfort and safety. Through the considerate use of colour and material texture, the design of The Kite II can be fitted with dignity and independence.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Med

MEDICAL
May interfere with bags and tubes

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

TEL: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Kite II (M)

An adjustable full body harness that provides full body and trunk support in a padded seated position. Available in four sizes: S, M, L, XL

Version: 2.0
SKU: KIT-2-M

Trunk and Postural Support

Pack weight: 4.2kg

M

Medium



Suitable for:

Climbing, abseiling, high and low rope courses and caving or any situation where a full body harness might be used.

Contents

- 1 Kite II Harness:
 - 1 Kite II Body
 - 1 Kite II Chest Band
- 1 Standard Base Insert:
 - 1 Red Cover
 - 1 Under-Thigh Roll
 - 1 Seat Pad
 - 1 Comfort Pad
 - 1 Base Stiffener
- 1 Standard Back Insert:
 - 1 Black Cover
 - 1 Lumbar Roll
 - 1 Back Pad
 - 1 Back Stiffener
- 1 Attachment Kit:
 - 1 10mm Delta Maillon
 - 4 8mm Delta Maillons
 - 2 Red Lanyards (Back and Leg)
 - 2 Blue Lanyards (Back and Leg)
 - 1 Tuff Stuff Sac (XL Square)

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Kite II is a full body harness that is useful where the user's body shape is symmetrical or asymmetrical whilst seated. The Kite II can be adjusted to accommodate climbers who may be either top heavy or bottom heavy. Fitted from either standing, sitting, or lying down, the Kite II provides postural and positioning support that can be tailored to the individual. It enables seated climbing in comfort and safety. Through the considerate use of colour and material texture, the design of The Kite II can be fitted with dignity and independence.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Med

MEDICAL
May interfere with bags and tubes

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Kite II (L)

An adjustable full body harness that provides full body and trunk support in a padded seated position. Available in four sizes: S, M, L, XL

Version: 2.0
SKU: KIT-2-L

Trunk and Postural Support

Pack weight: 5.4kg



Suitable for:

Climbing, abseiling, high and low rope courses and caving or any situation where a full body harness might be used.

Contents

- 1 Kite II Harness:
 - 1 Kite II Body
 - 1 Kite II Chest Band
- 1 Standard Base Insert:
 - 1 Red Cover
 - 1 Under-Thigh Roll
 - 1 Seat Pad
 - 1 Comfort Pad
 - 1 Base Stiffener
- 1 Standard Back Insert:
 - 1 Black Cover
 - 1 Lumbar Roll
 - 1 Back Pad
 - 1 Back Stiffener
- 1 Attachment Kit:
 - 1 10mm Delta Maillon
 - 4 8mm Delta Maillons
 - 2 Red Lanyards (Back and Leg)
 - 2 Blue Lanyards (Back and Leg)
 - 1 Tuff Stuff Sac (XXL Square)

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org

v8 July 2013



See reverse for more details

Description

The Kite II is a full body harness that is useful where the user's body shape is symmetrical or asymmetrical whilst seated. The Kite II can be adjusted to accommodate climbers who may be either top heavy or bottom heavy. Fitted from either standing, sitting, or lying down, the Kite II provides postural and positioning support that can be tailored to the individual. It enables seated climbing in comfort and safety. Through the considerate use of colour and material texture, the design of The Kite II can be fitted with dignity and independence.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Med

MEDICAL
May interfere with bags and tubes

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Kite II (XL)

An adjustable full body harness that provides full body and trunk support in a padded seated position. Available in four sizes: S, M, L, XL

Version: 2.0
SKU: KIT-2-XL

Trunk and Postural Support

Pack weight: 6.7kg

XL

Extra Large



Suitable for:

Climbing, abseiling, high and low rope courses and caving or any situation where a full body harness might be used.

Contents

- 1 Kite II Harness:
 - 1 Kite II Body
 - 1 Kite II Chest Band
- 1 Standard Base Insert:
 - 1 Red Cover
 - 1 Under-Thigh Roll
 - 1 Seat Pad
 - 1 Comfort Pad
 - 1 Base Stiffener
- 1 Standard Back Insert:
 - 1 Black Cover
 - 1 Lumbar Roll
 - 1 Back Pad
 - 1 Back Stiffener
- 1 Attachment Kit:
 - 1 10mm Delta Maillon
 - 4 8mm Delta Maillons
 - 2 Red Lanyards (Back and Leg)
 - 2 Blue Lanyards (Back and Leg)
 - 1 Tuff Stuff Sac (XXL Square)

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org

v8 July 2013



See reverse for more details

Description

The Kite II is a full body harness that is useful where the user's body shape is symmetrical or asymmetrical whilst seated. The Kite II can be adjusted to accommodate climbers who may be either top heavy or bottom heavy. Fitted from either standing, sitting, or lying down, the Kite II provides postural and positioning support that can be tailored to the individual. It enables seated climbing in comfort and safety. Through the considerate use of colour and material texture, the design of The Kite II can be fitted with dignity and independence.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Med

MEDICAL
May interfere with bags and tubes

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Kite II Maxi Black Back Insert (L)

Additional highly padded back insert for use with the Large Kite II.

Version: 1.0
SKU: MBK-1-L

Trunk and Postural Support

Pack weight: 1.05kg



Contents

- 1 Yellow Trim Black Maxi Cover
- 1 Back Stiffener
- 1 Back Pad
- 3 Black Beans

Suitable for:

Adjustable support for people with complex sitting postures, or for those who require additional padding or protection.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Kite II Maxi Inserts are highly padded, modular cushions that can be inserted into a Kite II climbing harness. The Maxi Back insert provides postural support for climbers who require a highly padded and mouldable seat back.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Kite II Maxi Black Back Insert (M)

Additional highly padded back insert for use with the Medium Kite II.

Version: 1.0
SKU: MBK-1-M

Trunk and Postural Support

Pack weight: 0.5kg



Contents

- 1 Red Trim Black Maxi Cover
- 1 Back Stiffener
- 1 Back Pad
- 3 Black Beans

Suitable for:

Adjustable support for people with complex sitting postures, or for those who require additional padding or protection.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Kite II Maxi Inserts are highly padded, modular cushions that can be inserted into a Kite II climbing harness. The Maxi Back insert provides postural support for climbers who require a highly padded and mouldable seat back.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Kite II Maxi Red Base Insert (L)

Highly adjustable base insert for use with the Large Kite II.

Version: 1.0
SKU: MBA-1-L

Trunk and Postural Support

Pack weight: 0.95kg



Large



Red and Yellow



Contents

- 1 Yellow Trim Red Maxi Cover
- 1 Base Stiffener
- 1 Seat Pad
- 3 Black Beans

Suitable for:

Adjustable support for people with complex sitting postures, or for those who require additional padding or protection.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Kite II Maxi Inserts are highly padded, modular cushions that can be inserted into a Kite II climbing harness. The Maxi Base insert provides postural support for climbers who require a highly padded and mouldable seat base.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Kite II Maxi Red Base Insert (M)

Highly adjustable base insert for use with the Medium Kite II.

Version: 1.0
SKU: MBA-1-M

Trunk and Postural Support

Pack weight: 0.55kg



Contents

- 1 Red Trim Red Maxi Cover
- 1 Base Stiffener
- 1 Seat Pad
- 3 Black Beans

Suitable for:

Adjustable support for people with complex sitting postures, or for those who require additional padding or protection.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Kite II Maxi Inserts are highly padded, modular cushions that can be inserted into a Kite II climbing harness. The Maxi Base insert provides postural support for climbers who require a highly padded and mouldable seat base.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Full Body Harness (Adult - M-XL)

An adult full body climbing harness.
Available in two sizes: XS-L, M-XL

Version:
SKU: ADU-M-XL

Trunk and Postural
Support

Pack weight: 0.61kg



Contents

- 1 Adult Full Body Harness
- 1 Custom Tuff Stuff Sac

Suitable for:

When it is essential to provide additional support for climbers with lack of core stability.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

A full body harness that has central tying-in points, wide webbing and integral chest and leg loops. It is typically used for climbing, abseiling, high and low rope courses and caving. The inclusion of the shoulder and chest straps provides an alternative to a sit harness. It is ideal where the climber's body shape is asymmetrical left or right, or top heavy, which may cause concern over security on inversion or during suspension.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

All ALLERGY Materials may cause allergic reactions	Med MEDICAL May interfere with bags and tubes	Cir CIRCULATION May affect circulation	Pos POSTURE Consider postural stability	Mov MOVEMENT Prolonged use may cause discomfort	Fit FIT Only for intended purpose	Sus SUSPENSION Prolonged suspension may cause trauma
Con CONSENT Gain consent before use	Per PERSONAL Requires operating in personal areas	Load LOAD Do not exceed the maximum load	Sys SYSTEM Ensure integrity if used as part of a system	PPE PPE Conform to PPE standards during use	Fla FLAMMABLE Contains flammable parts	Wear WEAR & TEAR Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Full Body Harness (Adult - XS-L)

An adult full body climbing harness.
Available in two sizes: XS-L, M-XL

Version:
SKU: ADU-XS-L

Trunk and Postural
Support

Pack weight: 0.58kg

XS-L

Extra small - Large



Contents

- 1 Adult Full Body Harness
- 1 Custom Tuff Stuff Sac

Suitable for:

When it is essential to provide additional support for climbers with lack of core stability.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

A full body harness that has central tying-in points, wide webbing and integral chest and leg loops. It is typically used for climbing, abseiling, high and low rope courses and caving. The inclusion of the shoulder and chest straps provides an alternative to a sit harness. It is ideal where the climber's body shape is asymmetrical left or right, or top heavy, which may cause concern over security on inversion or during suspension.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

All ALLERGY Materials may cause allergic reactions	Med MEDICAL May interfere with bags and tubes	Cir CIRCULATION May affect circulation	Pos POSTURE Consider postural stability	Mov MOVEMENT Prolonged use may cause discomfort	Fit FIT Only for intended purpose	Sus SUSPENSION Prolonged suspension may cause trauma
Con CONSENT Gain consent before use	Per PERSONAL Requires operating in personal areas	Load LOAD Do not exceed the maximum load	Sys SYSTEM Ensure integrity if used as part of a system	PPE PPE Conform to PPE standards during use	Fla FLAMMABLE Contains flammable parts	Wear WEAR & TEAR Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Full Body Harness (Child)

A full body climbing harness designed for children.

Version:
SKU: CHI-JUNIOR

Trunk and Postural Support

Pack weight: 0.35kg



Contents

- 1 Full Body Children's Harness
- 1 Custom Tuff Stuff Sac

Suitable for:

When it is essential to provide additional support for climbers with lack of core stability.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

A full body harness that has central tying-in points, wide webbing and integral chest and leg loops. It is typically used for climbing, abseiling, high and low rope courses and caving. The inclusion of the shoulder and chest straps provides an alternative to a sit harness. It is ideal where the climber's body shape is asymmetrical left or right, or top heavy, which may cause concern over security on inversion or during suspension.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Med MEDICAL May interfere with bags and tubes	Cir CIRCULATION May affect circulation	Skin SKIN CARE Consider skin care during use	Pos POSTURE Consider postural stability	Mov MOVEMENT Prolonged use may cause discomfort	Fit FIT Only for intended purpose	Sus SUSPENSION Prolonged suspension may cause trauma
Con CONSENT Gain consent before use	Per PERSONAL Requires operating in personal areas	Load LOAD Do not exceed the maximum load	Sys SYSTEM Ensure integrity if used as part of a system	PPE PPE Conform to PPE standards during use	Fla FLAMMABLE Contains flammable parts	Wear WEAR & TEAR Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Cosy Toes (M-L)

A supportive foot rest for the lower limbs whilst suspended.
Available in two sizes: S-M, M-L

Version: 2.0
SKU: COS-2-M-L

Trunk and Postural Support

Pack weight: 1.25kg

M-L

Medium - Large



Contents

- 1 Cosy Toes Body
- 1 Base Stiffener
- 1 Base Pad
- 1 2 Piece Red Adjusting Leash
- 1 2 Piece Blue Adjusting Leash
- 1 Tuff Stuff Sac (L Square)

Suitable for:

When there is a need to provide support to the lower limbs to protect the integrity of the circulation.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Cosy Toes is a support system for feet and lower limbs, typically used for climbing, abseiling and other suspended rope based activities. The Cosy Toes holds the limbs together to enable the amount of support to be adjusted, maintaining comfort and reducing restrictions to circulation, especially below the knees.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Med MEDICAL May interfere with bags and tubes	Cir CIRCULATION May affect circulation	Skin SKIN CARE Consider skin care during use	Pos POSTURE Consider postural stability	Mov MOVEMENT Prolonged use may cause discomfort	Fit FIT Only for intended purpose	Sus SUSPENSION Prolonged suspension may cause trauma
Con CONSENT Gain consent before use	Per PERSONAL Requires operating in personal areas	Load LOAD Do not exceed the maximum load	Sys SYSTEM Ensure integrity if used as part of a system	Fla FLAMMABLE Contains flammable parts	Wear WEAR & TEAR Wear and Tear reduces function	

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Cosy Toes (S-M)

A supportive foot rest for the lower limbs whilst suspended.
Available in two sizes: S-M, M-L

Version: 2.0
SKU: COS-2-S-M

Trunk and Postural Support

Pack weight: 1.1kg



Contents

- 1 Cosy Toes Body
- 1 Base Stiffener
- 1 Base Pad
- 1 2 Piece Red Adjusting Leash
- 1 2 Piece Blue Adjusting Leash
- 1 Tuff Stuff Sac (L Square)

Suitable for:

When there is a need to provide support to the lower limbs to protect the integrity of the circulation.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Cosy Toes is a support system for feet and lower limbs, typically used for climbing, abseiling and other suspended rope based activities. The Cosy Toes holds the limbs together to enable the amount of support to be adjusted, maintaining comfort and reducing restrictions to circulation, especially below the knees.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Med MEDICAL May interfere with bags and tubes	Cir CIRCULATION May affect circulation	Skin SKIN CARE Consider skin care during use	Pos POSTURE Consider postural stability	Mov MOVEMENT Prolonged use may cause discomfort	Fit FIT Only for intended purpose	Sus SUSPENSION Prolonged suspension may cause trauma
Con CONSENT Gain consent before use	Per PERSONAL Requires operating in personal areas	Load LOAD Do not exceed the maximum load	Sys SYSTEM Ensure integrity if used as part of a system	Fla FLAMMABLE Contains flammable parts	Wear WEAR & TEAR Wear and Tear reduces function	

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Caterpillar

Adjustable padded and washable head support.

Version: 3.0
SKU: CAT-3

Trunk and Postural Support

Pack weight: 0.4kg



Contents

- 2 Small Neoprene Pockets
- 1 Large Neoprene Multiform Pocket
- 4 Black Beans
- 1 2 Piece Velcro Neck Size Adjuster (Yellow Tabs)
- 2 Red Quick Release Toggle Connectors
- 1 Blue Anchor Strap
- 1 Tuff Stuff Sac (M Square)

Suitable for:

Supporting the head to maintain an active head posture and clear airway.

A Postural Support Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Caterpillar is a stretchy neoprene covered adjustable head support. When used with an Aquabac or The Kite II harness, the Caterpillar can help to position the head to support comfortable and active participation.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg HYGIENE May require washing between use	All ALLERGY Materials may cause allergic reactions	Air AIRWAY May restrict airway	Cir CIRCULATION May affect circulation	Skin SKIN CARE Consider skin care during use	Pos POSTURE Consider postural stability	Mov MOVEMENT Prolonged use may cause discomfort
Fit FIT Only for intended purpose	Sus SUSPENSION Prolonged suspension may cause trauma	Con CONSENT Gain consent before use	Per PERSONAL Requires operating in personal areas	Ent ENTRAPMENT Use may cause entrapment	Load LOAD Do not exceed the maximum load	Sys SYSTEM Ensure integrity if used as part of a system
Fla FLAMMABLE Contains flammable parts	Wear WEAR & TEAR Wear and Tear reduces function					

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org



Assisted Movement (ASM)

A range of solutions to assist in the safe and comfortable movement, journeys and positioning of people in and around, or to and from, an activity site.

Mango Spreader Bar

A steel bar which locates the attachment points for the Mango Sling so that the Mango Sling can be attached to the Cango Mechanical Hoist or a pulley system.

Version: 2.0
SKU: SPR-2

Assisted Movement

Pack weight: 0.95kg



Contents

- 1 Spreader Bar
- 1 6mm Delta Maillon
- 1 Tuff Stuff Sac (M Long)

Suitable for:

Maintaining comfortable distances between the lifting handles on the Mango Sling.

A *Mobility Programme* product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Mango Spreader Bar is used in conjunction with the Mango Sling to improve comfort by reducing the pressure that may be placed on parts of the body. The evenly spaced attachment points across the Spreader Bar ensure that the strops on the Mango Sling are always kept apart, thus reducing compressive pressure on the user.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Fit

FIT
Only for intended purpose

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Mango Sling (L)

A carrier for moving people mechanically or manually over small distances.

Available in three sizes: S, M, L

Version: 2.0

SKU: MSL-2-L

Assisted Movement

Pack weight: 1.15kg

L

Large



Contents

- 1 Mango Sling
- 1 Central Back Stiffener
- 2 Peripheral Back Stiffeners
- 1 Tuff Stuff Sac (L Long)

Suitable for:

Moving people with limited body movement over short distances.

A Mobility Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Mango Sling is a versatile, quilted and padded carrier designed to enable people to be lifted either manually or mechanically in order for them to transfer from one surface to another in comfort and with dignity. Typically used for moving a person from a wheelchair to another situation.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Med

MEDICAL
May interfere with bags and tubes

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Ent

ENTRAPMENT
Use may cause entrapment

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Mango Sling (M)

A carrier for moving people mechanically or manually over small distances.

Available in three sizes: S, M, L

Version: 2.0

SKU: MSL-2-M

Assisted Movement

Pack weight: 1.1kg

M

Medium



Contents

- 1 Mango Sling
- 1 Central Back Stiffener
- 2 Peripheral Back Stiffeners
- 1 Tuff Stuff Sac (L Long)

Suitable for:

Moving people with limited body movement over short distances.

A Mobility Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Mango Sling is a versatile, quilted and padded carrier designed to enable people to be lifted either manually or mechanically in order for them to transfer from one surface to another in comfort and with dignity. Typically used for moving a person from a wheelchair to another situation.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Med

MEDICAL
May interfere with bags and tubes

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Ent

ENTRAPMENT
Use may cause entrapment

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Mango Sling (S)

A carrier for moving people mechanically or manually over small distances.

Available in three sizes: S, M, L

Version: 2.0

SKU: MSL-2-S

Assisted Movement

Pack weight: 1.05kg

S

Small



Contents

- 1 Mango Sling
- 1 Central Back Stiffener
- 2 Peripheral Back Stiffeners
- 1 Tuff Stuff Sac (L Long)

Suitable for:

Moving people with limited body movement over short distances.

A Mobility Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Mango Sling is a versatile, quilted and padded carrier designed to enable people to be lifted either manually or mechanically in order for them to transfer from one surface to another in comfort and with dignity. Typically used for moving a person from a wheelchair to another situation.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Med

MEDICAL
May interfere with bags and tubes

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Pos

POSTURE
Consider postural stability

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Ent

ENTRAPMENT
Use may cause entrapment

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Mango Assist Handles

Six stiffened handles for use with any size of Mango Sling.

Version: 2.0
SKU: MAA-2

Assisted Movement

Pack weight: 0.45kg



Contents

- 6 Yellow Handles
- 1 Red Looped Anchor Point
- 1 Green Looped Anchor Point
- 1 Blue Double Buckled Strap
- 1 Tuff Stuff Sac (S Square)

Suitable for:

Use with the Mango Sling to facilitate good moving and handling techniques in the outdoor environment.

A Mobility Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Mango Assist Handles are stiffened handles for use with any size of Mango Sling. The Mango Assist Handles clip on at six points around the Mango Sling to allow a team to support an assisted transfer or lift with dignity, in outdoor environments. The Mango Assist Handles allow for straps to be adjusted so that team members can tailor the lifting position to their own personal requirements.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

All

ALLERGY
Materials may cause allergic reactions

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Per

PERSONAL
Requires operating in personal areas

Ent

ENTRAPMENT
Use may cause entrapment

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.



Activity and Safety Equipment (ASE)

A range of products that provide versatile solutions to accommodate inclusion in specific activities.

Adder Ladder

Versatile climbing ladder for use with the Sensory Kit.

Version: 1.0
SKU: ADD-1

Activity and Safety Equipment

Pack weight: 20.5kg



Contents

- 1 Adder Ladder
- 2 10mm Delta Maillons
- 1 Adder Ladder Bag:
 - 1 Adder Ladder Bag Wrap
 - 1 Adder Ladder Bag Tie (4mm Rope)
- 1 Carrying Straps

Suitable for:

Especially useful for climbers who find hand and foot holds on climbing walls inaccessible.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Adder Ladder is an extra wide, 6m long rope ladder where the added width allows two climbers to use the ladder at any one time. The Adder Ladder has been specifically designed for use in conjunction with existing climbing walls and high ropes courses. The fixing points at the top and bottom allow the climber to adjust the level of challenge. The Adder Ladder is especially useful for climbers who find hand and foot holds on climbing walls inaccessible.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Skin

SKIN CARE
Consider skin care during use

Fit

FIT
Only for intended purpose

Sus

SUSPENSION
Prolonged suspension may cause trauma

Con

CONSENT
Gain consent before use

Ent

ENTRAPMENT
Use may cause entrapment

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Climbing Bar

Rope ascender attachment.

Version: 2.0
SKU: CBB-2

Activity and Safety Equipment

Pack weight: 2.55kg



Contents

- 1 Standard Climbing Bar:
- 1 Two Handed Grip
- 1 Ropeman 2
- 1 Clip-on Wide Shoulder Grip
- 1 Clip-on Single Handed Grip
- 1 Detachable Foot Stirrup
- 1 Tuff Stuff Sac (L Square)

Suitable for:

Used to create a handle on a rope in a range of orientations to enable a vertical rope climb.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The modular Climbing Bar is a rope climbing aid. When combined with the mechanical advantage of a pulley system, it will allow a person with limited upper and/or lower body movement to ascend a rope. The Climbing Bar can be operated with movement in one or both arms or legs.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Fit

FIT
Only for intended purpose

Con

CONSENT
Gain consent before use

Ent

ENTRAPMENT
Use may cause entrapment

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Descender Handle

A handle attachment for use with Petzl Rig and Stop.

Version: 2.0
SKU: DES-2

Activity and Safety Equipment

Pack weight: 0.7kg



Contents

- 1 Petzl Stop
- 1 Stop Handle Set:
 - 1 Stainless Steel Handle Stiffener with Bolted Handle Locator
 - 1 Handle Pad (Yellow Tab)
 - 2 Black Velcro Retaining Straps
- 1 Wrist Wrap (Red and Yellow Tabs)
- 1 Tuff Stuff Sac (M Long)

Suitable for:

Used with climbers who require a larger grip or more leverage to manipulate a Petzl Rigg or Stop whilst abseiling.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Descender Handler is designed as an attachment for a Stop or Rig device. The Descender Handle will provide assistance with hand function to enable a Stop or Rig to be operated with confidence.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Hyg

HYGIENE
May require washing between use

Cir

CIRCULATION
May affect circulation

Skin

SKIN CARE
Consider skin care during use

Mov

MOVEMENT
Prolonged use may cause discomfort

Fit

FIT
Only for intended purpose

Con

CONSENT
Gain consent before use

Ent

ENTRAPMENT
Use may cause entrapment

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Climbing Bag of Tricks

A bagged collection of technical climbing equipment that supplements standard climbing 'racks' to provide alternative activities such as releasable pulley systems.

Version: 2.0
SKU: CBT-2

Activity and Safety Equipment

Pack weight: 10.92kg



Suitable for:

Providing a range of alternative climbing activities to aid introduction and progression in climbing.

Contents

- 12 Oval Screw Lock Karabiners
- 1 Gemini (Double Pulley)
- 1 Rescue (Single Pulley)
- 1 Pro Traxion (Progress Capture Device)
- 1 Paw Plate (Rigging Plate)
- 1 Swivel Small
- 1 Grigri 2 (Belay Device)
- 4 120cm Sling
- 2 50m 10.5mm Rope
- 1 Climbing Trick Bag:
 - 1 Climbing Trick Bag Wrap
 - 1 Climbing Trick Bag Tie (4mm Rope)

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Climbing Bag of Tricks provides a versatile set of supplementary technical climbing equipment that when used together can create a range of free hanging rope activities.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Fit

FIT
Only for intended purpose

Con

CONSENT
Gain consent before use

Ent

ENTRAPMENT
Use may cause entrapment

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Kangaroo Bundle Bag

A robust storage bag.

Version: 2.0
SKU: KAN-2

Activity and Safety
Equipment

Pack weight: 1.65kg



Contents

- 1 Kangaroo Bag
- 1 Grey Scuff Guard

Suitable for:

Transporting Equal Adventure and other outdoor or sports equipment.

A Packaging product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Kangaroo Bundle Bag is a robust storage bag specifically designed for Equal Adventure equipment bundles, to enable easier transportation from one location to another.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Fit

FIT
Only for
intended
purpose

Con

CONSENT
Gain consent
before use

Fla

FLAMMABLE
Contains
flammable
parts

Wear

WEAR & TEAR
Wear and Tear
reduces
function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Climbing Trick Bag

Storage bag and teaching background for use with the Bag of Tricks.

Version: 2.0
SKU: CTB-2

Activity and Safety
Equipment
Pack weight: 1.1kg



Contents

- 1 Climbing Trick Bag Wrap
- 1 Climbing Trick Bag Tie (4mm Rope)

Suitable for:

Storing technical climbing equipment and creating teaching backgrounds or identifying ground anchors.

A Packaging product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

A multi functional rope and technical climbing equipment storage system, which also provides a background for teaching and demonstrating rope systems and identifying ground anchors.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Load

LOAD
Do not exceed the maximum load

Fla

FLAMMABLE
Contains flammable parts

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.

Adder Ladder Y-Hang

An arrangement of safety rated climbing equipment to suspend the Adder Ladder or a pulley system between two points.

Version: 1.0
SKU: Y-H-1

Activity and Safety Equipment

Pack weight: 2.2kg



Contents

- 1 Steel Shear Reduction Block
- 1 Screw Lock Steel Karabiners
- 2 Dual Anchor Assembly
- 2 10mm Long Opening Maillons
- 1 1 Tuff Stuff Sac (L Long)

Suitable for:

Suspending the Adder Ladder or a pulley system.

An Inclusive Climbing Programme product
For additional information visit:

www.equaladventure.org



v8 July 2013

See reverse for more details

Description

The Y-Hang is an arrangement of rated climbing equipment which reduces the wear and tear on the rigging used to suspend a pulley system or Adder Ladder.



WARNINGS AND CONSIDERATIONS

INCORRECT USE MAY RESULT IN SEVERE INJURY OR EVEN DEATH

Activities involving the use of this equipment are inherently dangerous.

- Read and understand all instructions before use
- Gain specific training in its proper use
- Become acquainted with its capabilities and limitations
- Gain experience and use judgement before accepting the risks of use.

Fit

FIT
Only for intended purpose

Con

CONSENT
Gain consent before use

Load

LOAD
Do not exceed the maximum load

Sys

SYSTEM
Ensure integrity if used as part of a system

PPE

PPE
Conform to PPE standards during use

Wear

WEAR & TEAR
Wear and Tear reduces function

Equal Adventure is not responsible for the consequences direct, indirect or accidental resulting from the use of this product.

For more information please contact:

Tel: 01479 861 200

Email: hello@equaladventure.org

www.equaladventure.org

Copyright Equal Adventure © 2013.

All Rights Reserved.